

# MPRT

## PROGRAMMABLE ROOM THERMOSTAT

### INSTALLATION INSTRUCTION


The MPRT is a programmable room thermostat. It senses the room temperature and if heat is called for, it activates the heating.



**WARNING:** Installation and maintenance to be carried out only by suitably qualified personnel and in accordance with current IEE wiring regulations.


#### LOCATING THE ROOM UNIT

The MPRT is mounted using the two screws provided. WHEREVER the Room Unit is mounted/used it should be out of direct sunlight, out of draughts, and clear of any heat source (e.g. radiators, fires or electronic equipment). For optimum use the unit should be sited between 1 and 1.5metres from the floor.

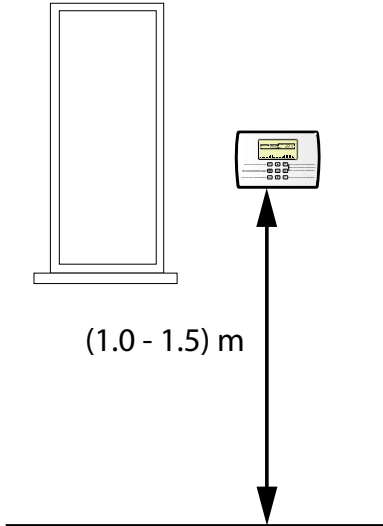


#### WIRING THE MPRT.

The MPRT is wired directly to the heating equipment.

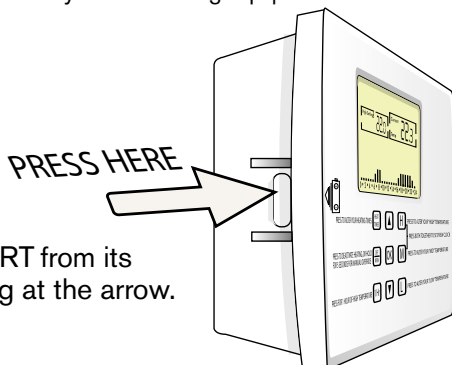


#### STEP 1.

Remove terminal cover by removing terminal screw.

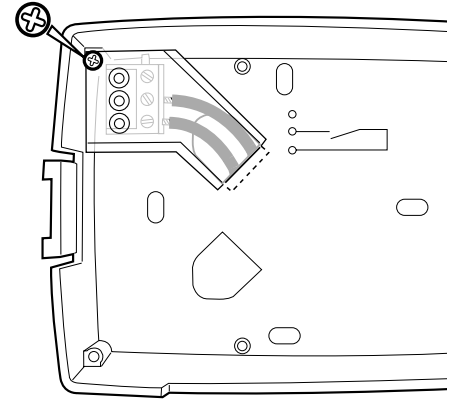


#### STEP 2.

Thread control wires through the knock-out and attach base plate to the wall.

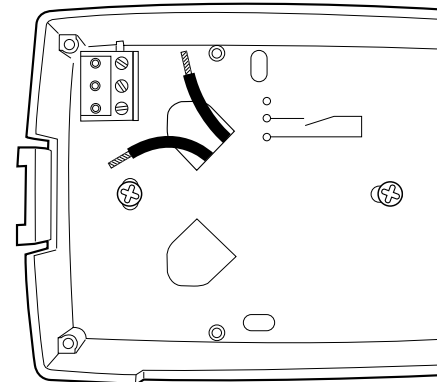


#### STEP 3.

Connect control wires to terminals 2 and 3.

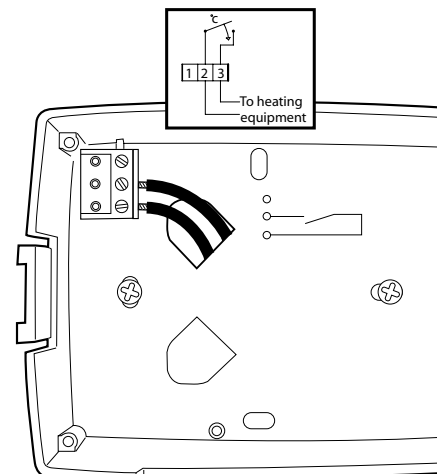

#### STEP 4.

The terminal cover must be replaced and secured with the screw removed in STEP 1.

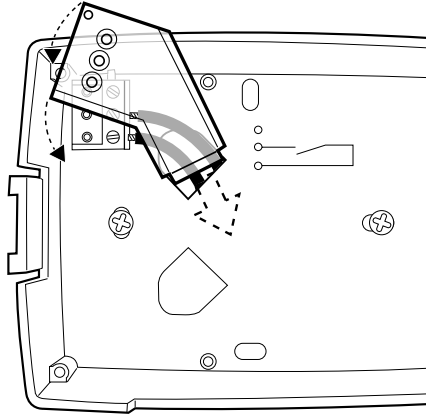

#### TECHNICAL DATA:

Precision of measured temperature: 0.1°C  
Set temperature range: 6°C to 32°C  
Electrical Protection: Class II  
Ingress Protection: IP30  
Batteries: 3 X LR6 AA 1.5V alkaline batteries  
Battery Life: 2 years approx.  
Statutory Compliance: EMC 89\336\EEC,  
LVD 2006\95\EEC  
Pollution Situation: Normal  
Software Class: A  
Output Relay Rating: 8(3)A 250Vac


---

#### ACTIVATING THE MPRT.

Remove the plastic strip that is preventing the battery connection in the battery compartment.

The LCD should display as shown below.

Re-assemble the unit to the base by first locating the right hand side and then closing the left .

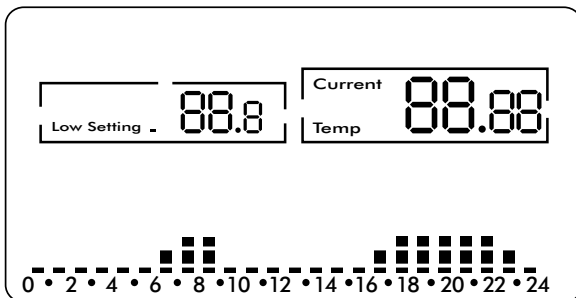

#### SETUP FOR SMART-START.

To toggle the Smart-Start function between enabled and disabled, hold and down for 10 seconds. The button can now be used to toggle Smart-Start between active and deactivated.

#### CONFIGURING FOR WEEKLY OR DAILY TIMING.

To toggle between weekly or daily time settings, hold and down for 10 seconds. The button can now be used to toggle between enabled and disabled.

#### CONFIGURING FOR GAS OR OIL

To toggle between Oil or Gas hold and down for 10 seconds. The button can be used to toggle between Oil and Gas.

---

MYSON CONTROLS  
MYSON LTD., EASTERN AVENUE,  
TEAM VALLEY, GATESHEAD,  
TYNE & WEAR, NE11 0PG  
SALES OFFICE No. 0845 402 3434

IN ACCORDANCE WITH OUR POLICY OF CONTINUAL PRODUCT IMPROVEMENT WE RESERVE THE RIGHT TO AMEND THE SPECIFICATION OF THESE PRODUCTS WITHOUT PRIOR NOTIFICATION.

